



- SWELL**
- SWELL 10-16
- SWELL 8
- SWELL 2
- SWELL 4
- SWELL 8
- SWELL 8
- SWELL 8
- FEDAL**
- FEDAL 8
- FEDAL 16
- FEDAL 4
- FEDAL 8
- FEDAL 8
- FEDAL 16
- COMPLERS**
- COMPLERS 16
- COMPLERS 8
- COMPLERS 8
- COMPLERS 16



- GREAT**
- GREAT 8
- GREAT 16
- GREAT 2
- GREAT 4
- GREAT 8
- GREAT 8
- CHOIR**
- CHOIR 8
- CHOIR 16
- CHOIR 4
- CHOIR 8
- CHOIR 8
- CHOIR 16
- CHOIR 16
- CHOIR 8
- CHOIR 8
- CHOIR 8

001 001

Control panel with multiple rows of buttons and sliders. The top row contains buttons labeled 1 through 8. The middle row contains buttons labeled 1 through 8. The bottom row contains buttons labeled 7 through 12.

Row of buttons labeled Gen 1 through Gen 6, followed by Sw to Gt.

Row of buttons labeled Gen 7 through Gen 12, followed by a button with a left-pointing arrow.

Row of buttons labeled Gt to Ped, Sw to Ped, Ch to Ped, Trombone, Zimbelstern, and Tutti.

Row of buttons labeled Ped 1 through Ped 6, preceded by a button with a right-pointing arrow.

